

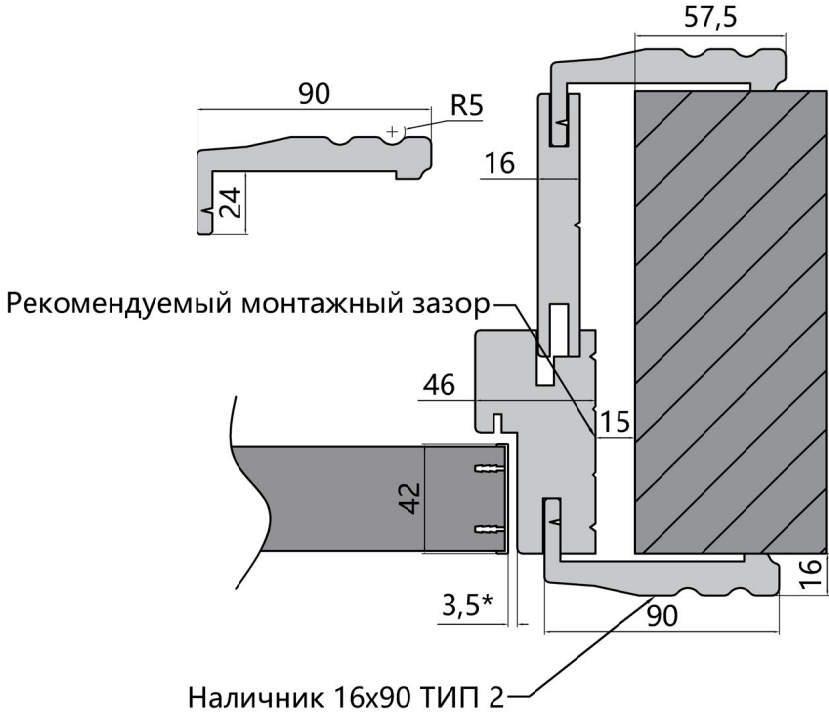





Дверной короб 46*85 Наличник 16*90 Тип -2

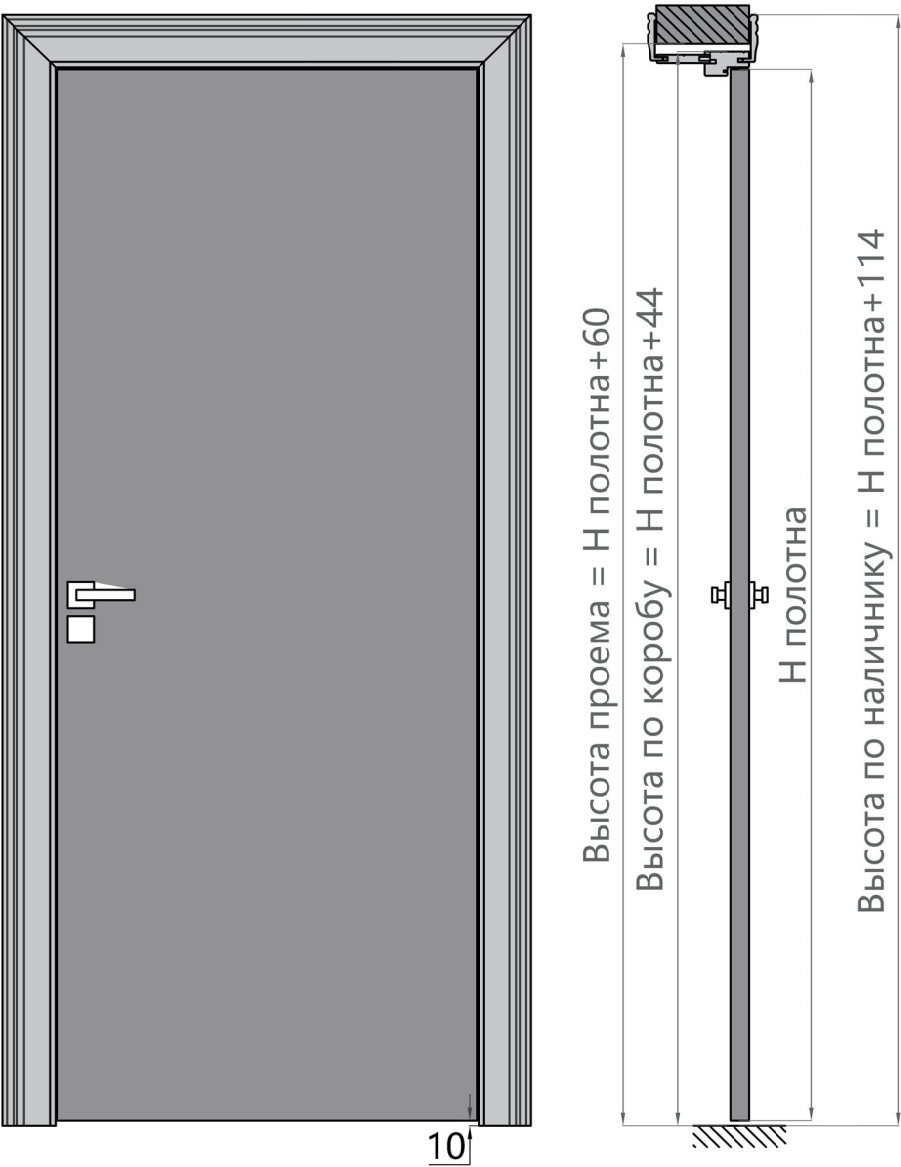

СТАНДАРТНЫЕ ПРОЕМЫ			
ВЫСОТА ПОЛОТНА	ВЫСОТА ПРОЕМА	ШИРИНА ПОЛОТНА	ШИРИНА ПРОЕМА
1900	1960	600	700
2000	2060	700	800
2100	2160	800	900
2200	2260	900	1000
2300	2360	1000	1100




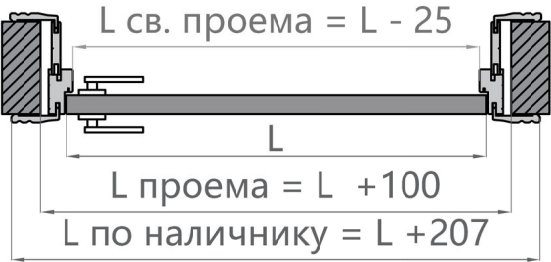


Дверной короб 46*85 Наличник 10*80 Прямой

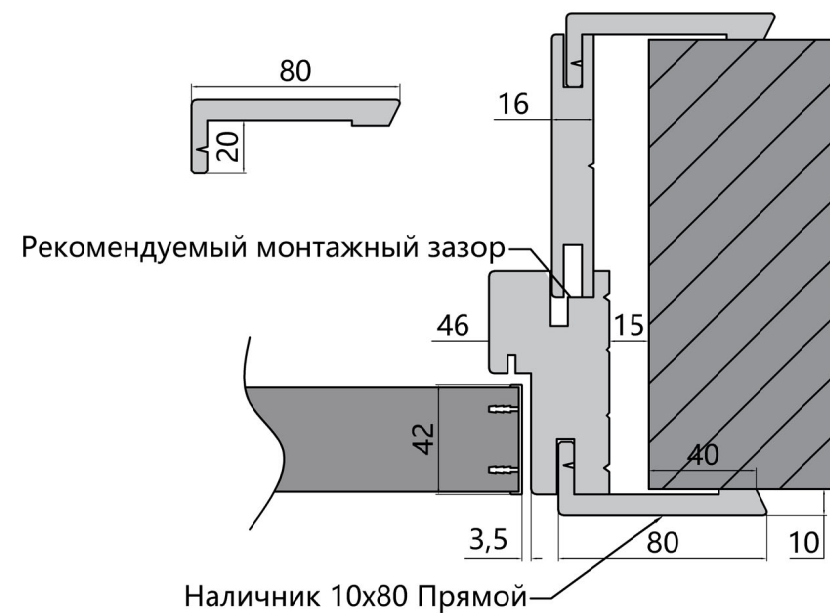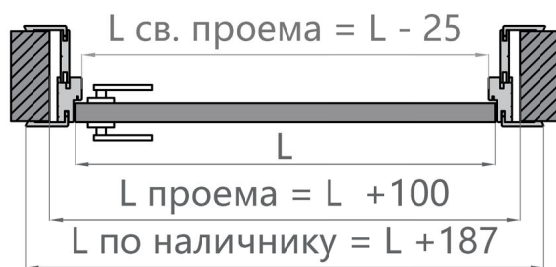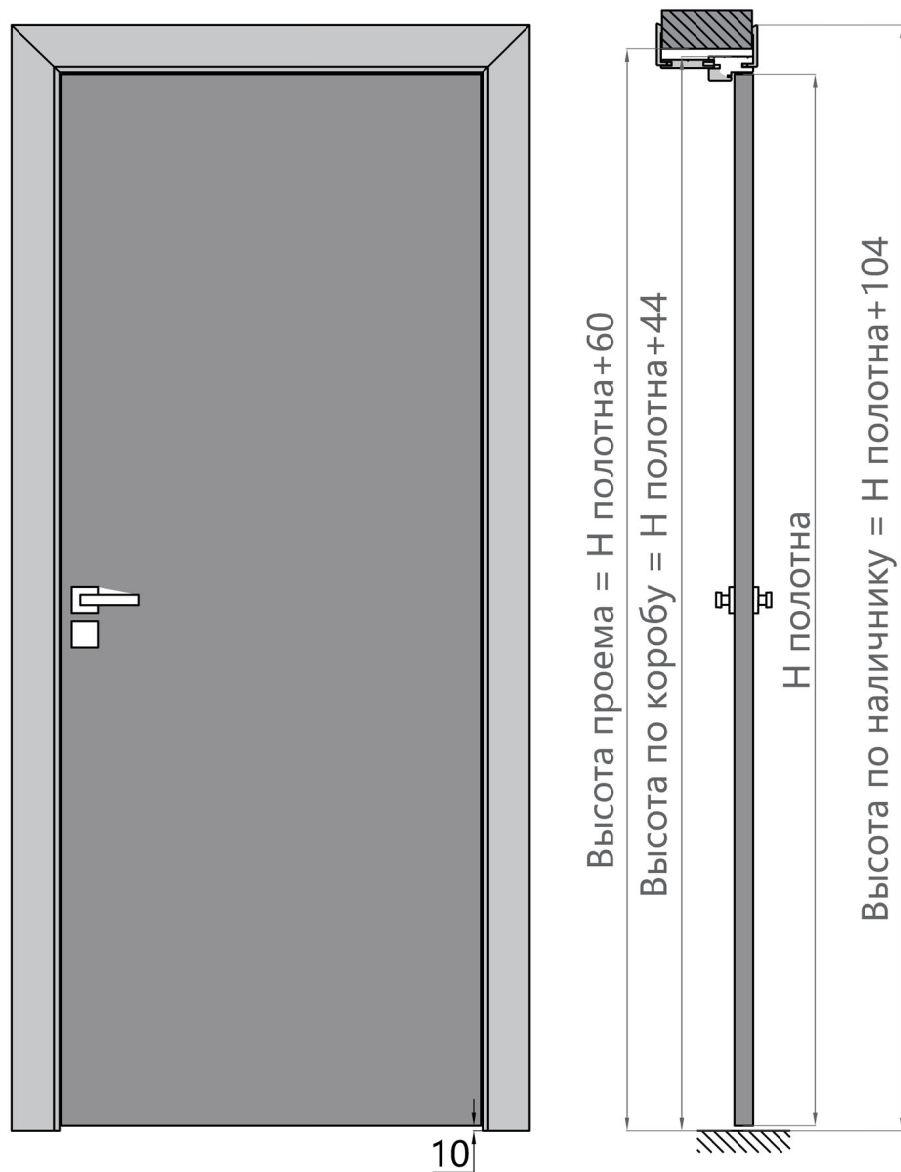




СТАНДАРТНЫЕ ПРОЕМЫ			
ВЫСОТА ПОЛОТНА	ВЫСОТА ПРОЕМА	ШИРИНА ПОЛОТНА	ШИРИНА ПРОЕМА
1900	1960	600	700
2000	2060	700	800
2100	2160	800	900
2200	2260	900	1000
2300	2360	1000	1100

Дверной короб 46*85 Наличник 16*90 Тип -1

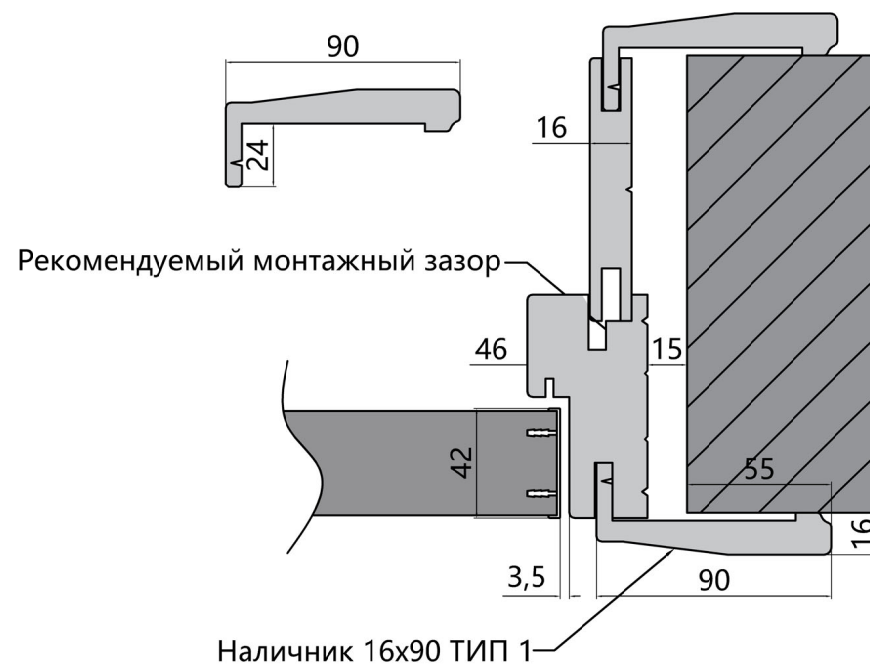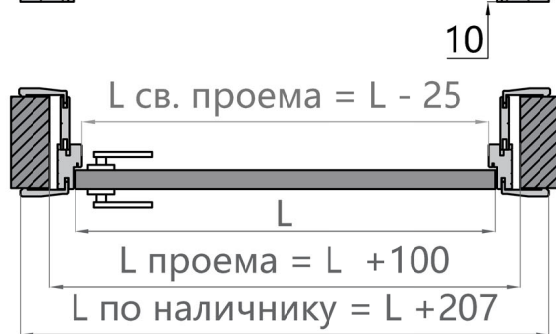
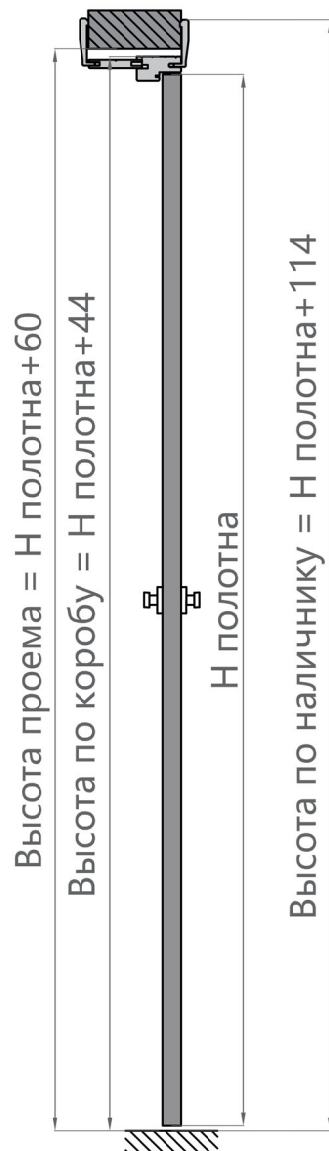
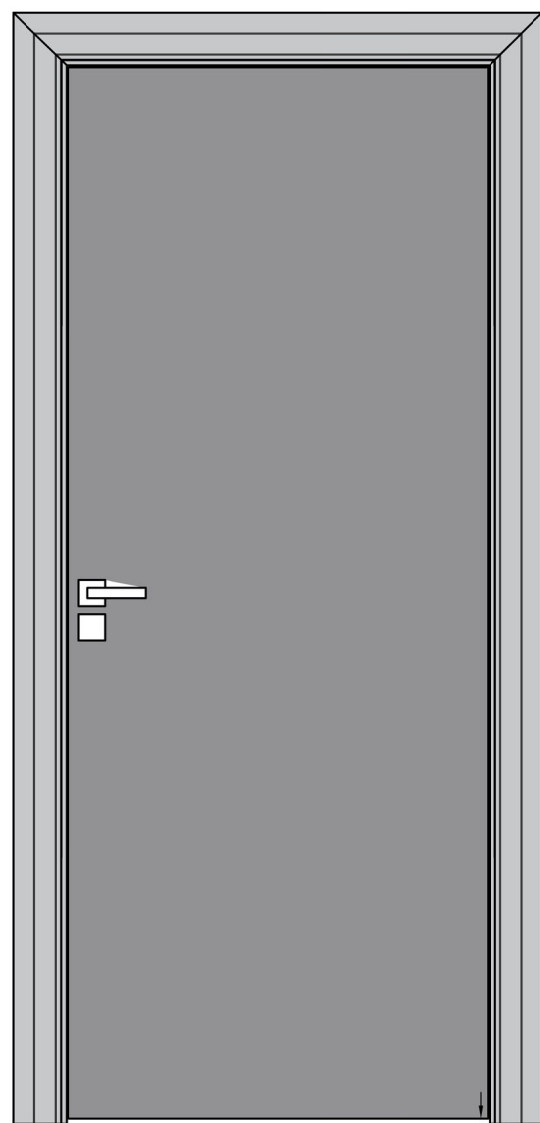


СТАНДАРТНЫЕ ПРОЕМЫ			
ВЫСОТА ПОЛОТНА	ВЫСОТА ПРОЕМА	ШИРИНА ПОЛОТНА	ШИРИНА ПРОЕМА
1900	1960	600	700
2000	2060	700	800
2100	2160	800	900
2200	2260	900	1000
2300	2360	1000	1100




Охваты телескопического погонажа для короба 46x85

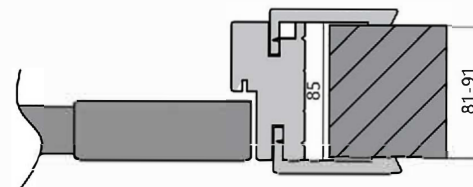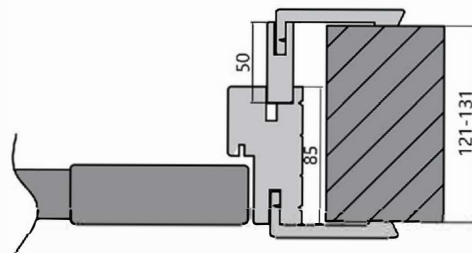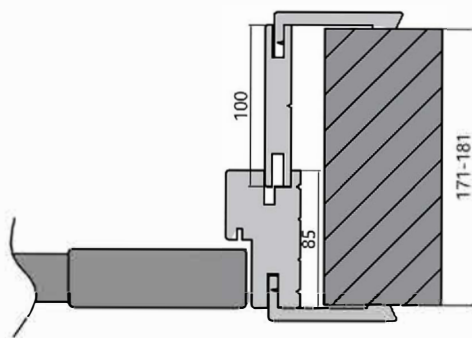

Добор 100 мм

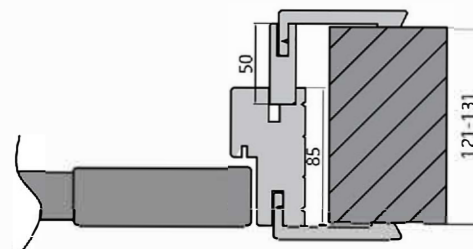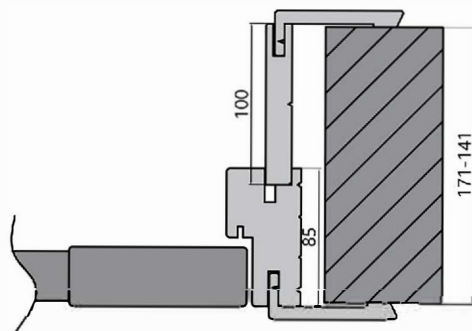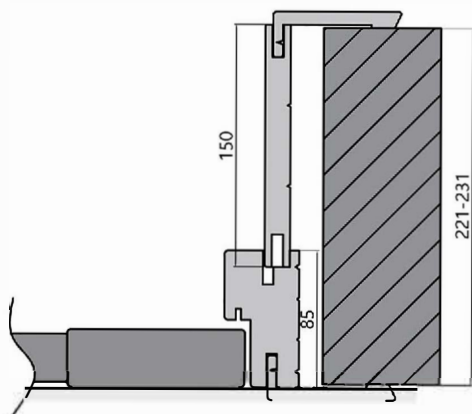

Добор 150 мм

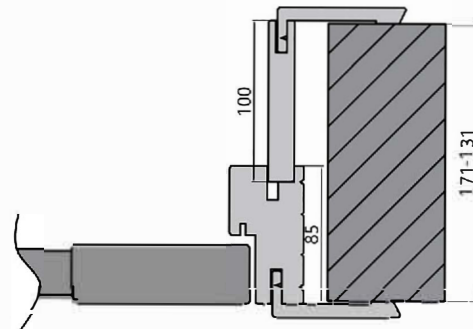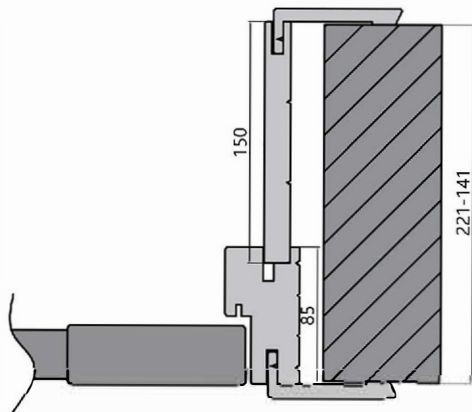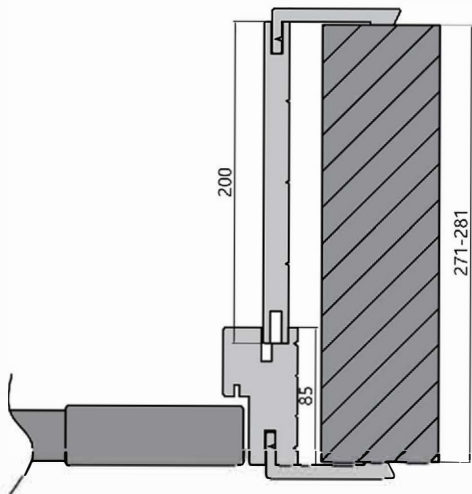

Добор 200 мм